



GE Remote Keyfobs

Lock Button: Arms the Entire System (Away Mode)

Un-Lock Button: Disarms the System

Light Bulb Button: Arms the system without motion detectors. (Stay Mode)

Star Button: Arms the entire system but without chirping the siren. Not used very often.

Police Panic: Press the lock and Un-Lock Buttons at the same time to notify the Police in a panic situation. This signal will generate an immediate dispatch of the Police by the central station.

When using the keyfob you must press and hold the button until the light on the keyfob blinks.

When Arming and disarming the system with the keyfob the siren will chirp once when arming and twice when disarming.

Any questions or concerns please feel free to call Southern Burglar and Fire at 1-877-338-7491 to speak with a technician.

